

**P510/3 Inst. Sch.
PHYSICS
(Practical)
INSTRUCTIONS
Nov./Dec. 2022**



**UGANDA NATIONAL EXAMINATIONS BOARD
Uganda Advanced Certificate of Education
PHYSICS PRACTICAL INSTRUCTIONS**

P510/3 Inst. Sch.

November/December, 2022

CONFIDENTIAL

Great care should be taken that the information given below does not reach the candidates either directly or indirectly.

INSTRUCTIONS FOR PREPARING APPARATUS

The candidates will be instructed **not** to write out a detailed description of the apparatus. The teacher responsible for preparing the apparatus **must** give details (on the report form attached) about some of the items or apparatus he/she has supplied. The form should be signed by the invigilator, teacher responsible for preparing the apparatus and the Head teacher.

[NB: The Head teacher must ensure that the teacher responsible for preparing the apparatus hands in his/her trial results, properly sealed in a separate envelope and firmly fastened (attached) to the candidates' scripts envelope(s).]

In addition to the apparatus ordinarily contained in a Physics laboratory, each candidate will require;

Question 1

- 1 metre rule.
- 1 retort stand with 2 clamps.
- 1 beaker of 250 cm^3 .
- 1 helical spring (Nuffield type).
- 3 pieces of thread each about 50.0 cm long.
- 1 50 g mass.
- 1 rubber bung of mass between 40 g and 95 g , labelled *Q*.
- 1 measuring cylinder of 100 cm^3 .
- 1 stop clock/stop watch.
- 2 pieces of wooden blocks $2 \text{ cm} \times 2 \text{ cm} \times 4 \text{ cm}$.
- 1 piece of tissue paper about 50 cm long.
- 1 half metre rule.
- 200 cm^3 of paraffin in a beaker, labelled liquid *L*.
- Source of water.
- Access to a weighing scale.

Question 2

- 1 glass block of about $2.0 \text{ cm} \times 6.0 \text{ cm} \times 11.0 \text{ cm}$.
- 1 soft board.
- 1 plain white sheet of paper.
- 2 drawing pins.
- 1 complete Mathematical set.
- 4 optical pins.
- 1 plane mirror.

Question 3

- 1 metre rule.
- 2 fresh dry cells (size D) e.m.f 1.5 V each in a holder.
- 1 switch labelled, *K*.
- 1 ammeter ($0 - 1 \text{ A}$).
- 1 voltmeter ($0 - 3 \text{ V}$ or $0 - 5 \text{ V}$).
- 1 standard resistor of resistance 2Ω , labelled *R*.
- 1 piece of nichrome wire (SWG 28), of length 110 cm , fixed using sellotape along a metre rule and labelled, *W*.

- 1 piece of constantan wire (SWG 28), of length 60 cm, fixed using sellotape along a half-metre rule and labelled, P .
- 1 centre-zero galvanometer.
- 12 pieces of connecting wires each of length about 50.0 cm.
- 4 crocodile clips.
- 1 micrometer screw gauge.
- 1 jockey/crocodile clip.
- 1 slide - wire potentiometer.
- 1 $5\ \Omega$ standard resistor with its value concealed.

P510/3
PHYSICS
(Practical)
Paper 3
Nov. /Dec. 2022
3¼ hours



UGANDA NATIONAL EXAMINATIONS BOARD

Uganda Advanced Certificate of Education

PHYSICS
(PRACTICAL)

Paper 3

3 hours 15 minutes

INSTRUCTIONS TO CANDIDATES:

Answer question 1 and one other question.

Any additional question answered will not be marked.

Candidates are not allowed to use the apparatus for the first fifteen minutes.

For each question, candidates will be required to select suitable apparatus from the equipment provided.

Candidates are expected to record in their scripts in blue or black ink all their observations as these observations are made and to plan for the presentation of the records so that it is not necessary to make a fair copy of them. The working of the answers is to be handed in. Any work in pencil will not be marked.

Marks are given mainly for a clear record of observations actually made, for their suitability, accuracy and for the use made of them.

Details on the question paper should not be repeated in the answer, nor is the theory of the experiment required unless specifically asked for. However, candidates should record any special precautions they have taken and any particular feature of the method of going about the experiment.

Graph paper is provided.

Mathematical tables and silent non-programmable scientific electronic calculators may be used.

1. In this experiment, you will determine the constant α of a solid labelled Q and constant β of the liquid labelled, L . (40 marks)

PART 1

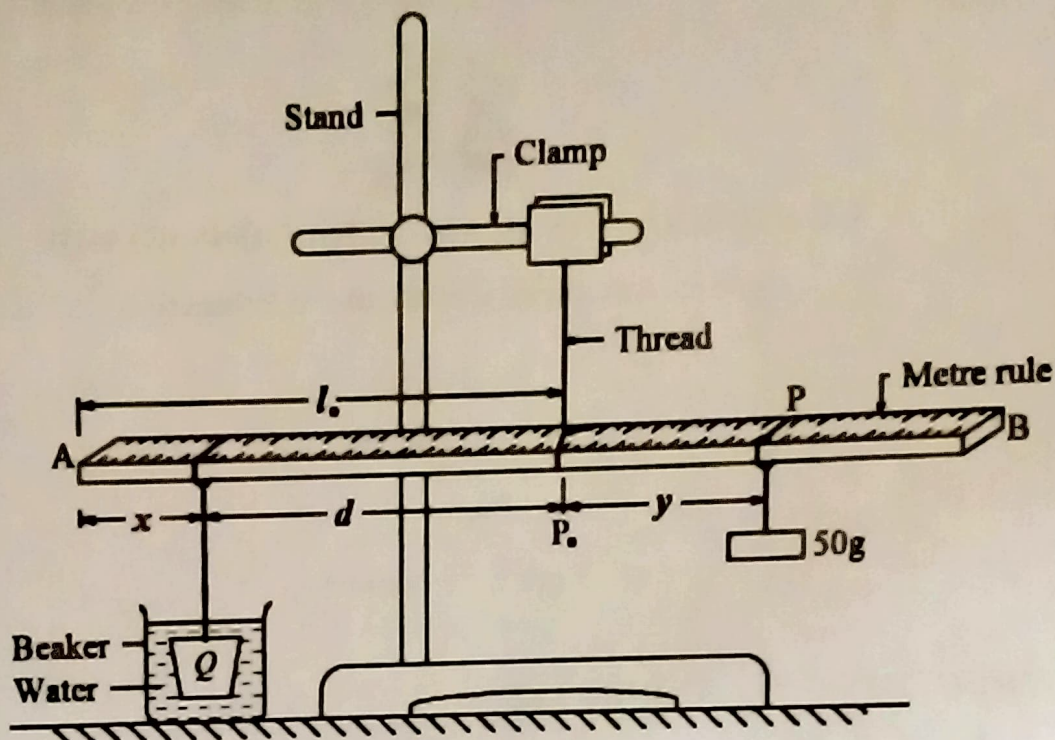


Fig. 1.1

- Record the mass, M of the solid Q provided.
- Suspend a meter rule from a clamp using a piece of thread.
- Adjust the metre rule until it balances horizontally.
- Read and record the distance l_0 of the balance point, P_0 of the meter rule from end A.
- Pour about 200 cm^3 of water in a beaker.
- Suspend the solid Q at a distance $x = 10.0 \text{ cm}$ from end A of the meter rule and submerge it completely in water.
- Suspend a 50 g mass at a point P between P_0 and end B of the metre rule.
- Adjust the position of P until the meter rule balances horizontally with Q completely immersed and not touching the beaker as shown in Figure 1.1.
- Read and record distance d .
- Read and record distance y .
- Repeat procedure (f) to (j), for values of $x = 15.0, 20.0, 25.0, 30.0$ and 35.0 cm .

- (l) Tabulate your results in a suitable table.
- (m) Plot a graph of y against d .
- (n) Find the slope, s_1 of the graph.
- (o) Calculate the constant, α of the solid Q from the expression;

$$\alpha = \frac{M}{M - 50 s_1}.$$

PART II

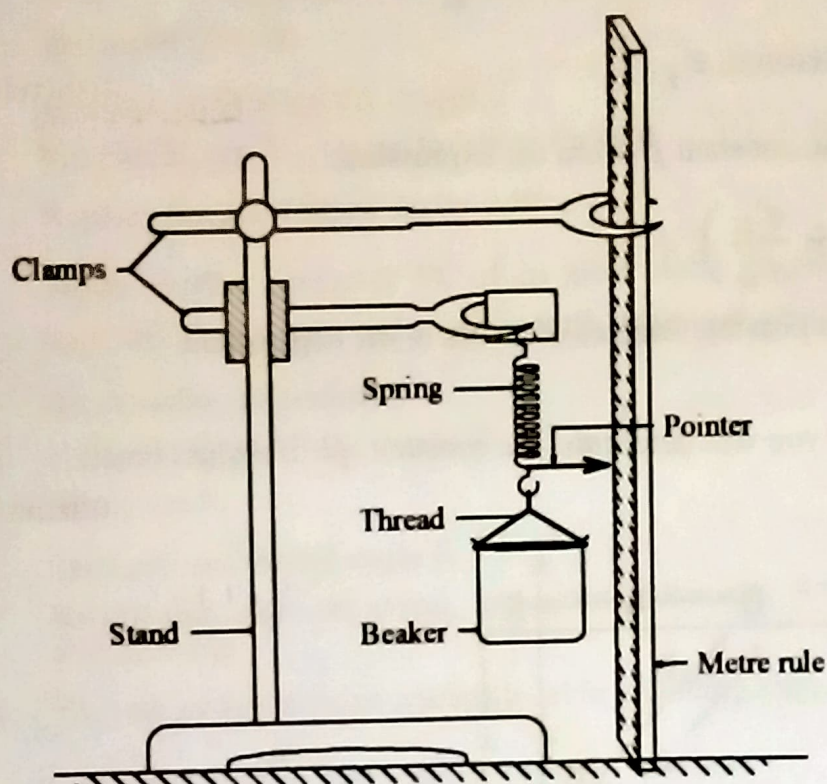


Fig. 1.2

- (a) Clamp the spring provided vertically using pieces of wood.
- (b) Suspend the beaker from the spring as shown in Figure 1.2.
- (c) Record the initial position, K_0 of the pointer on the meter rule.
- (d) Pour 150 cm^3 of water into the beaker.
- (e) Read and record the new position, K_w of the pointer.
- (f) Find the extension, e_w .
- (g) Repeat procedure (d) with 100 cm^3 of water.
- (h) Read and record the new position, K'_w of the pointer.
- (i) Find the extension, e'_w .

- (j) Pour out the water and dry the beaker with a piece of tissue paper provided.
- (k) Repeat procedure (b) and (c).
- (l) Pour 150 cm^3 of liquid L into the beaker.
- (m) Read and record the new position, K_L of the pointer.
- (n) Find the extension, e_L
- (o) Repeat procedure (l) for 100 cm^3 of liquid L .
- (p) Read and record the new position, K'_L of the pointer.
- (q) Find the extension, e'_L .
- (r) Calculate the constant β from the expression;

$$2\beta = \left(\frac{e_L}{e_w} + \frac{e'_L}{e'_w} \right).$$
- (s) Explain two possible sources of errors in the experiment.

2. In this experiment you will determine the constant, μ of a glass block provided. (40 marks)

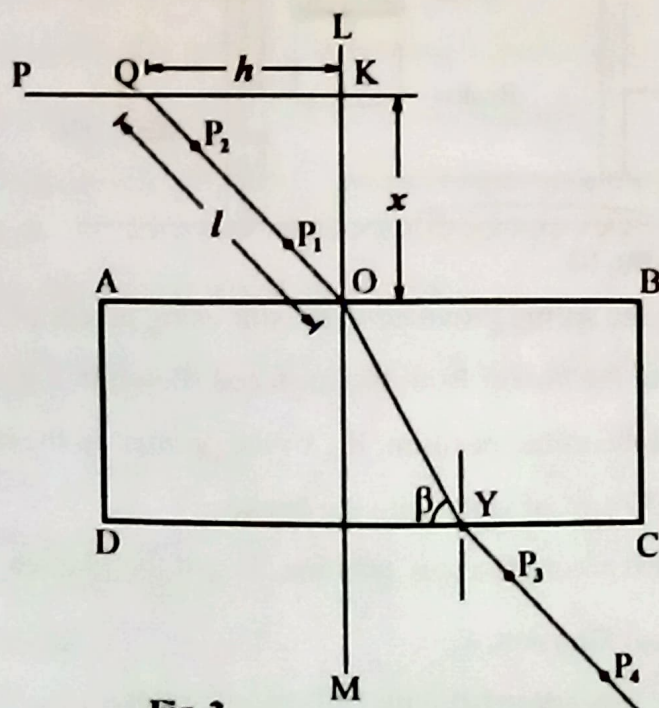


Fig. 2

- (a) Fix the white plain sheet of paper on a soft board using drawing pins.
- (b) Place the glass block on the paper with its broader face upwards and trace its outline ABCD.
- (c) Remove the glass block and draw a normal LOM to AB at a distance of 4.0 cm from end A of the glass block as shown in Figure 2.
- (d) Measure the distance $OK = x = 7.0$ cm along the normal LOM.
- (e) Draw a perpendicular POK to LOM at point K.
- (f) Measure distance $h = 2.0$ cm on line PK.
- (g) Join point Q to O.
- (h) Measure and record the length, l .
- (i) Fix pins P_1 and P_2 vertically along QO.
- (j) Replace the glass block on its outline.
- (k) While viewing from side DC of the glass block, fix pins P_3 and P_4 such that they appear to be in line with images of pins P_1 and P_2 .
- (l) Remove the glass block.
- (m) Join pins P_3 and P_4 to meet DC at Y.
- (n) Join Y to O.
- (o) Measure and record angle β .
- (p) Repeat procedure (e) to (m), for values of $h = 4.0, 6.0, 8.0, 10.0$ and 12.0 cm.
- (q) Record your results in a suitable table including values of

$$\frac{l^2}{h^2} \text{ and } \frac{1}{\cos^2 \beta}.$$

- (r) Plot a graph of $\frac{l^2}{h^2}$ against $\frac{1}{\cos^2 \beta}$.
- (s) Determine the slope, S , of the graph.
- (t) Calculate the value of the constant μ from the expression;

$$S = \frac{1}{\mu^2}.$$

- (u) Comment on the procedure and your results.

HAND IN YOUR TRACING TOGETHER WITH YOUR SCRIPT

3. In this experiment, you will determine the constant γ , of the bare wire labelled W . (40 marks)

PART 1

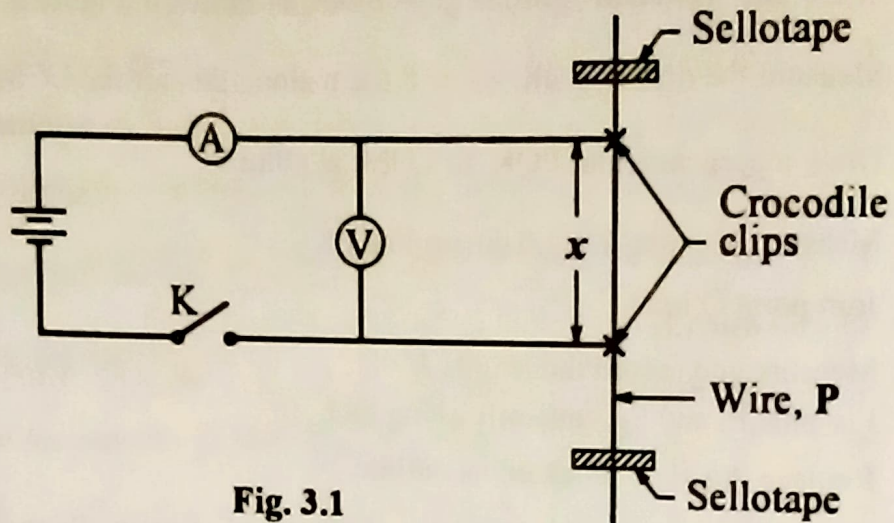


Fig. 3.1

- Connect the circuit shown in Figure 3.1.
- Adjust the length x of the wire P to 0.400 m.
- Close switch K .
- Read and record the ammeter reading, I and the voltmeter reading, V .
- Open switch K .
- Disconnect the circuit.

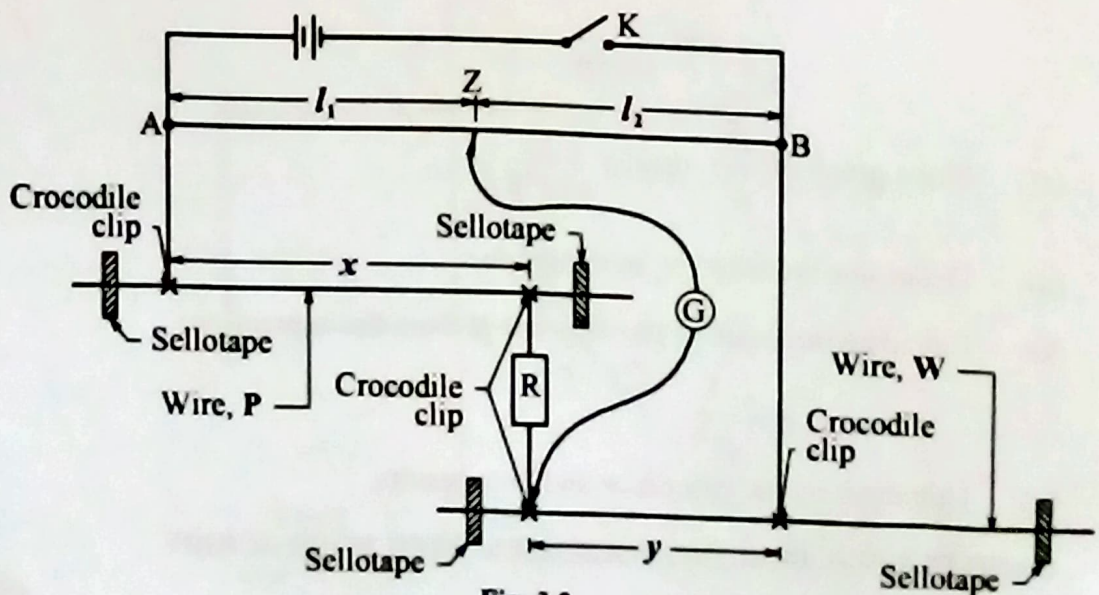


Fig. 3.2

PART II

- (a) Connect the circuit shown in the Figure 3.2 with the length x of the wire P equal to 0.400 m.
- (b) Adjust the length y of the wire W to 0.200 m.
- (c) Close switch K .
- (d) Move the sliding contact along the wire AB of the potentiometer and locate point Z for which the galvanometer shows no deflection.
- (e) Read and record the balance lengths l_1 and l_2 in meters.
- (f) Open switch K .
- (g) Repeat the procedure (b) to (f) for values of $y = 0.300, 0.400, 0.500, 0.600$ and 0.700 m.
- (h) Tabulate your results including values of $\frac{l_1}{l_2}$ and $\frac{1}{y}$.
- (i) Plot a graph of $\frac{l_1}{l_2}$ against $\frac{1}{y}$.
- (j) Find the slope, S of the graph.
- (k) Measure and record the diameter, D , of the wire W in metres.
- (l) Read and record the value of the resistor, R .
- (m) Calculate the constant γ of the wire W from the expression;
$$\gamma = 0.79 D^2 \left(\frac{V + IR}{IS} \right).$$
- (n) State six sources of errors in the experiment.